


**Screws (facing forward) on right hand:
M2*6 round head self-tapping screw**



**Screw (facing backwards) on right hand:
M2*6 round head self-tapping screw**

After the servo wire is connected,
right hand has been done.
Left hand is assemble according to the same method.

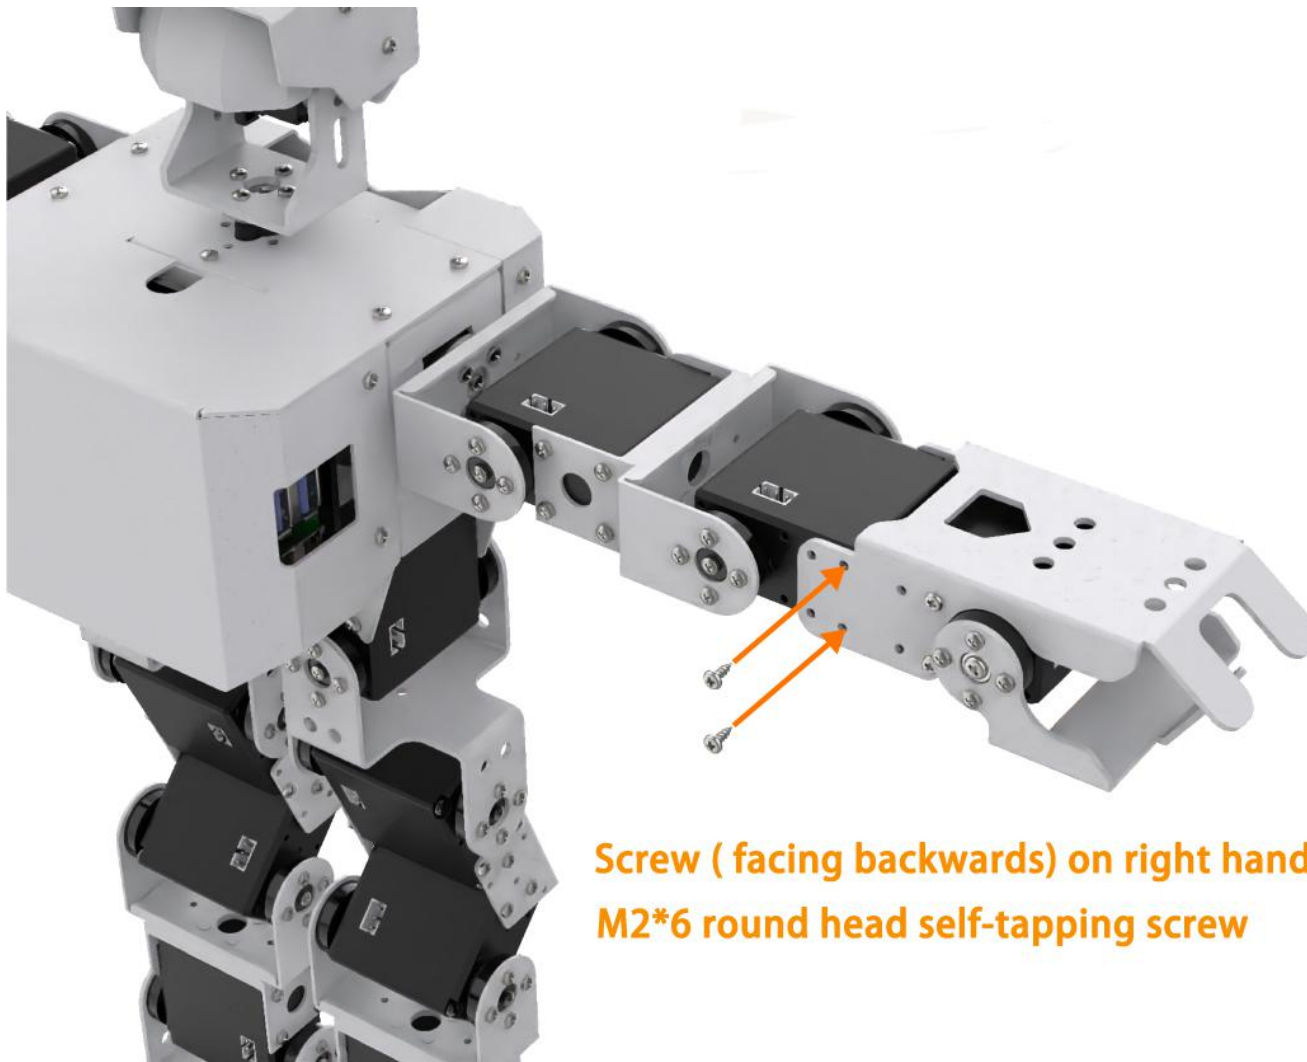